

THE SINGLE AIRER

FIG 1.

Choose a position for the airer. It should fix into a load bearing structure (e.g. ceiling joists)

Can you raise and lower the clothesmaid without obstruction?

Is the fixing position for the cleat in line with the pulley position and into a solid structure?

Mark out two fixing positions in the ceiling:

- 142cm apart for the 150cm airer
- 172cm apart for the 180cm airer

It's possible to adjust the position of the stainless steel hangers by utilizing the pre-drilled hole to accommodate odd joist spacing.

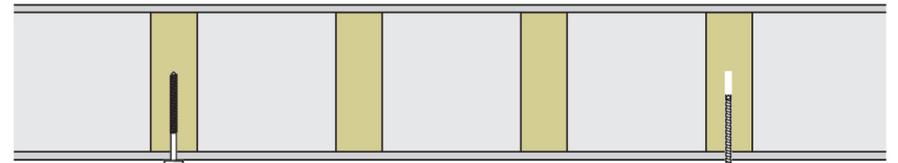


FIG 2.

Drill two holes to take the threaded pulley shafts provided. The double pulley should go nearest the wall / cleat hook. If it takes great effort to screw in the pulleys enlarge the holes SLIGHTLY. Use some oil to lubricate the pulley shaft.

If using Flat Plate pulleys drill and fix to the ceiling to the spacing slated in FIG 1. Use strong screws / rawlplugs into the solid ceiling. Again the double pulley should be nearest the wall / cleat.

Using the screws and rawlplugs provided attach the cleat to a solid, masonry or timber wall.

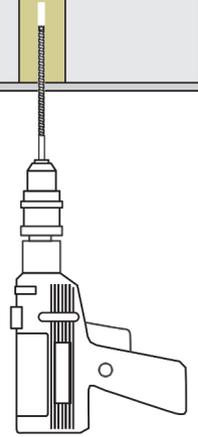


FIG 3.

Create a loop at the cleat end and thread the rope through the pulleys and tie the ends to the top of each stainless steel hanger.

Ensure the hangers are level and attach them to the ends of the wooden rail.



FIG 4.

If you want to position your airer away from a wall you should use an extra double pulley - this will keep the rope out of the way and close to the wall or ceiling.

You may also need a 15m rope if it's a large room.